FORM MS 4028-55
REPLACES FORM MS 3781 IN SERVICE MANUAL

Illustrated Parts List

MODEL

"6B-H"

•

HOW TO FIND THE CORRECT NUMBER OF THE PART YOU NEED

These instructions are to be followed when using the Parts Lists to determine the correct part for an engine.

A. Refer to Engine Model, Type and Serial Number that is stamped on the blower housing or name plate of engine. Then use the Parts Lists covering this Model and Type Number.

B. Refer to Illustrated Parts section and compare the old part with illustrations. The number on the illustrations is the Master Part Number. Assemblies include all part numbers shown in frames. All parts shown in assembly frames on which part numbers are given can be purchased separately also.

C. After the Master Part Number has been identified, refer to the Numerical Parts List, where these Master Parts Numbers are listed. THE MASTER PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE".


D. If a "Note" appears below the Master Part Number, this means that this part differs from the Master Part for certain types. If the Type Number is listed under "Note", order the part referred to.

E. If the Engine Type Number does not appear after any part number listed under "Note", use the Master Part Number.


This book is for your service manual only. Model "6B-H" Operating and Maintenance Manual -- Form 27744 -- is for customer's use and contains the same parts data. Price ten cents each.

PRINTED IN U.S.A.

ORIGINAL BRIGGS & STRATTON SERVICE PARTS ®

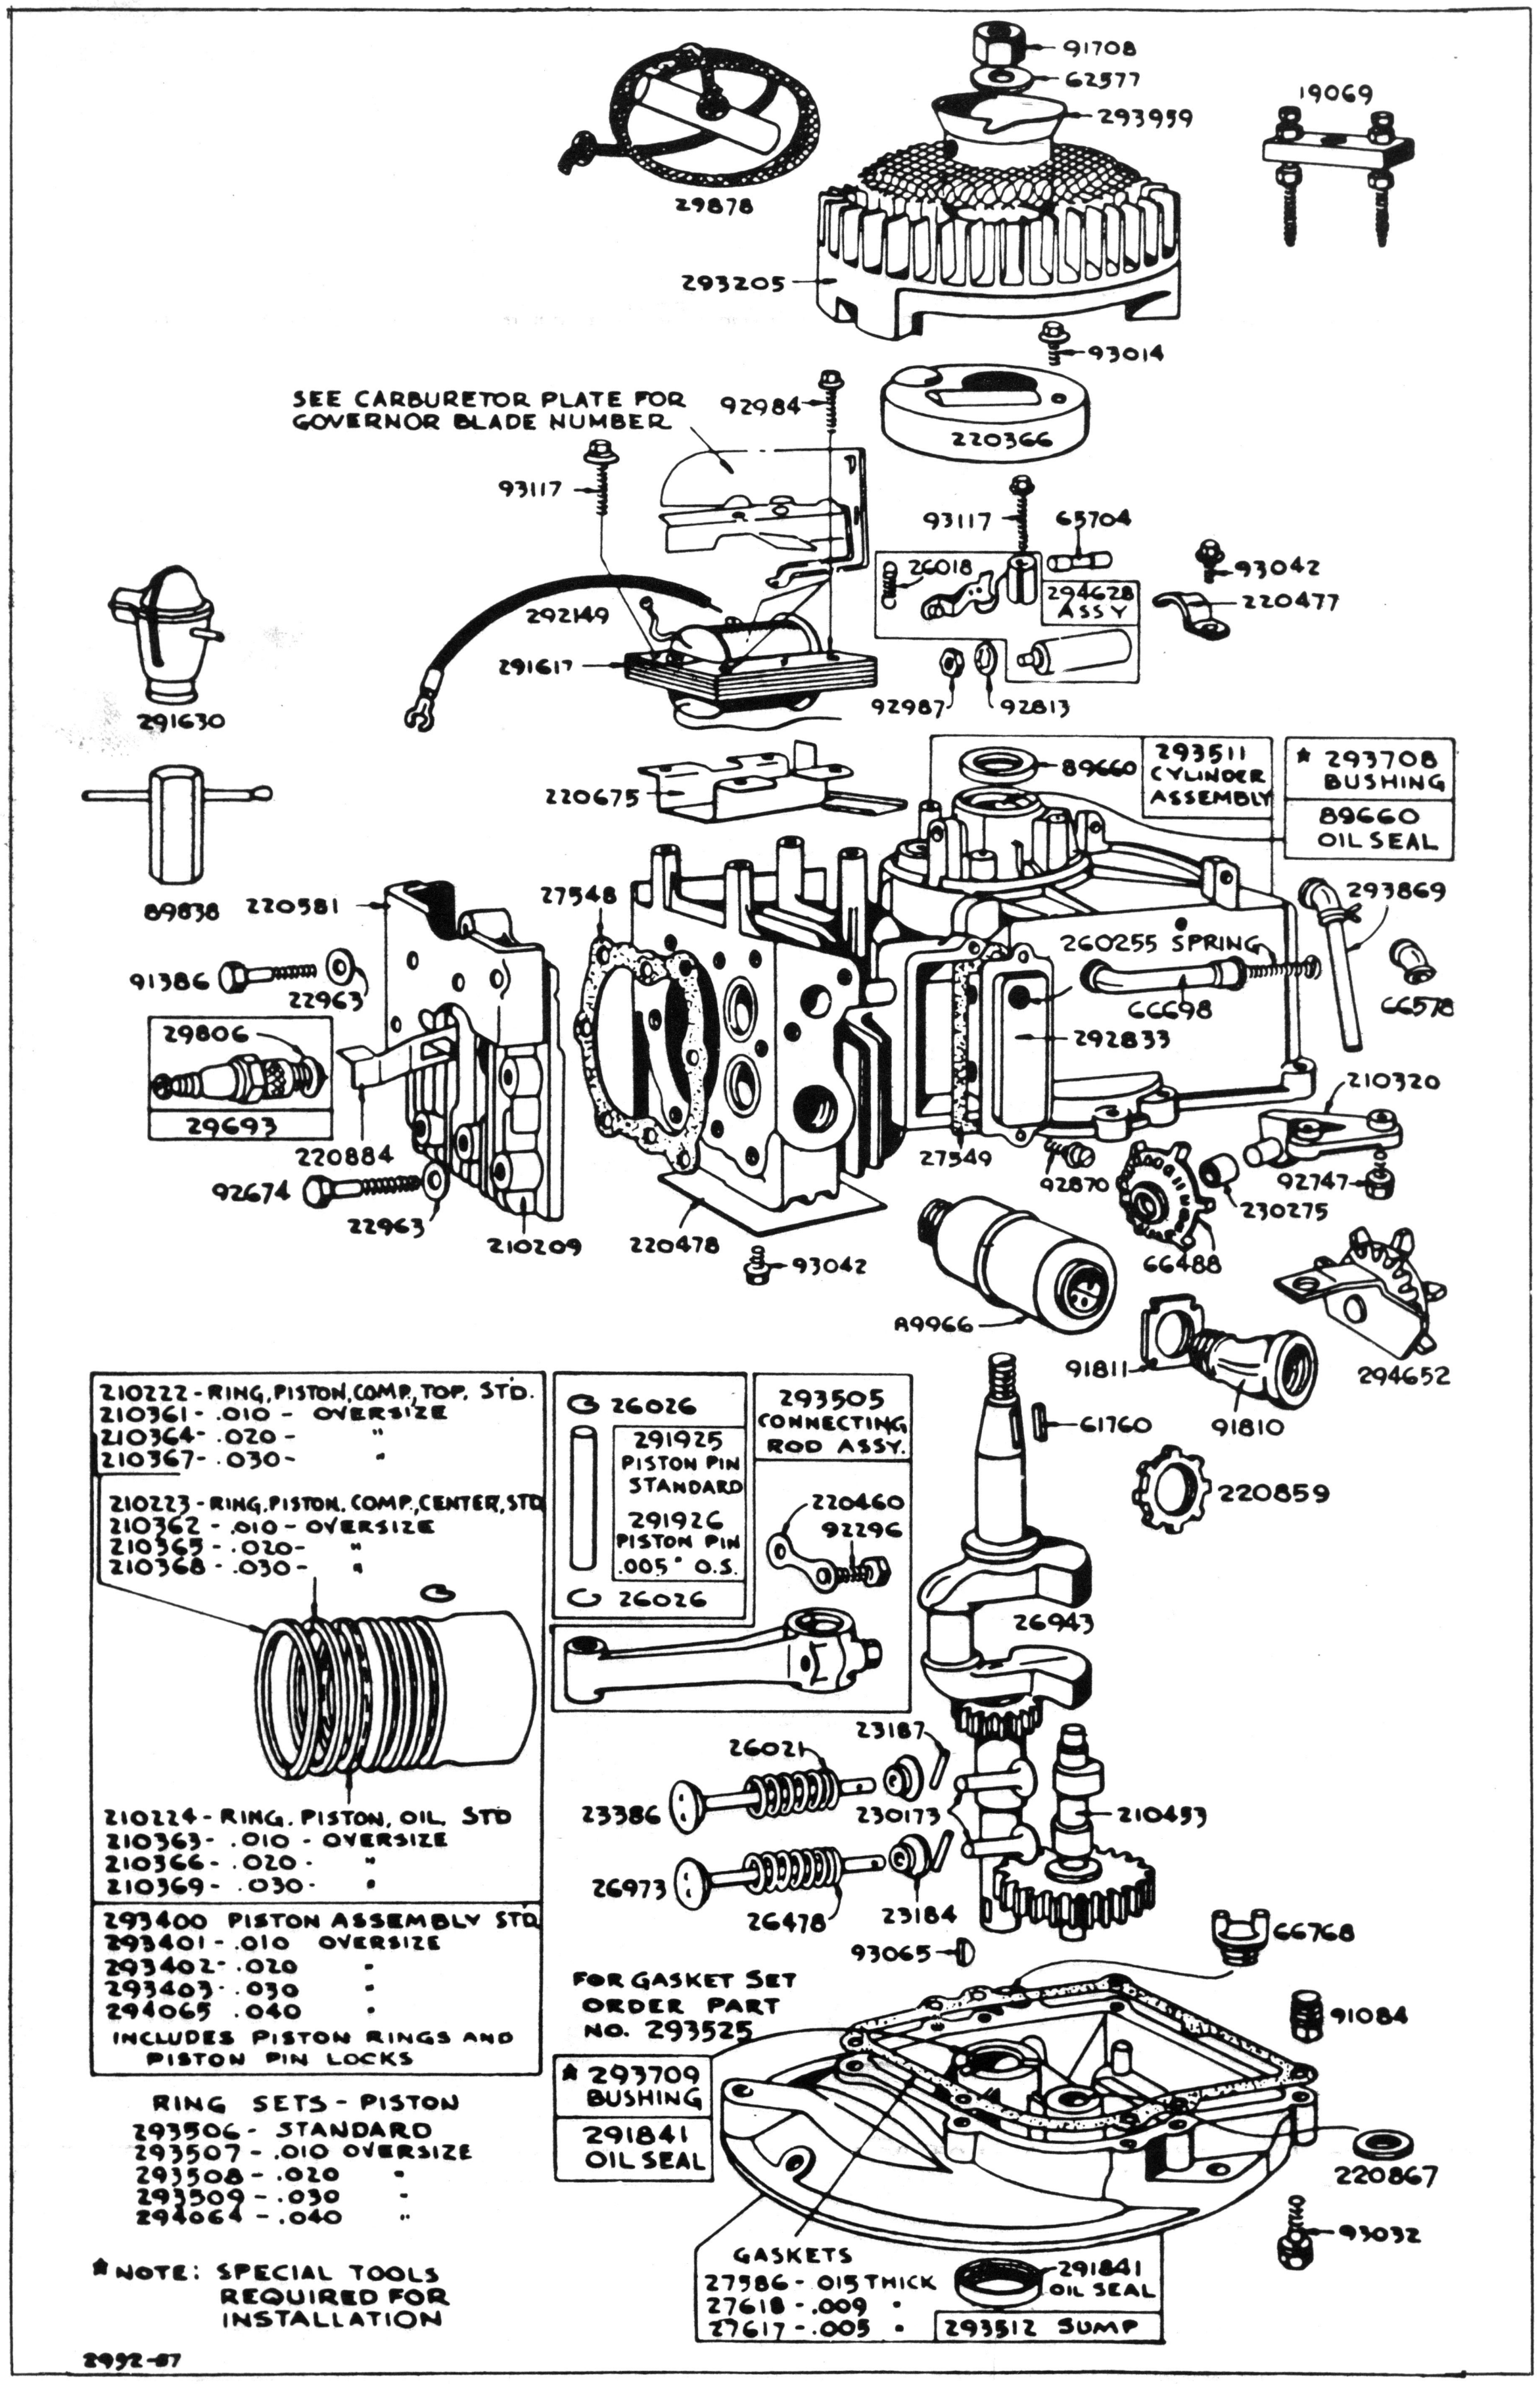


CYLINDER, PISTON, CONNECTING ROD, CRANKSHAFT, FLYWHEEL AND MAGNETO PARTS — Assemblies include all parts shown in frames.

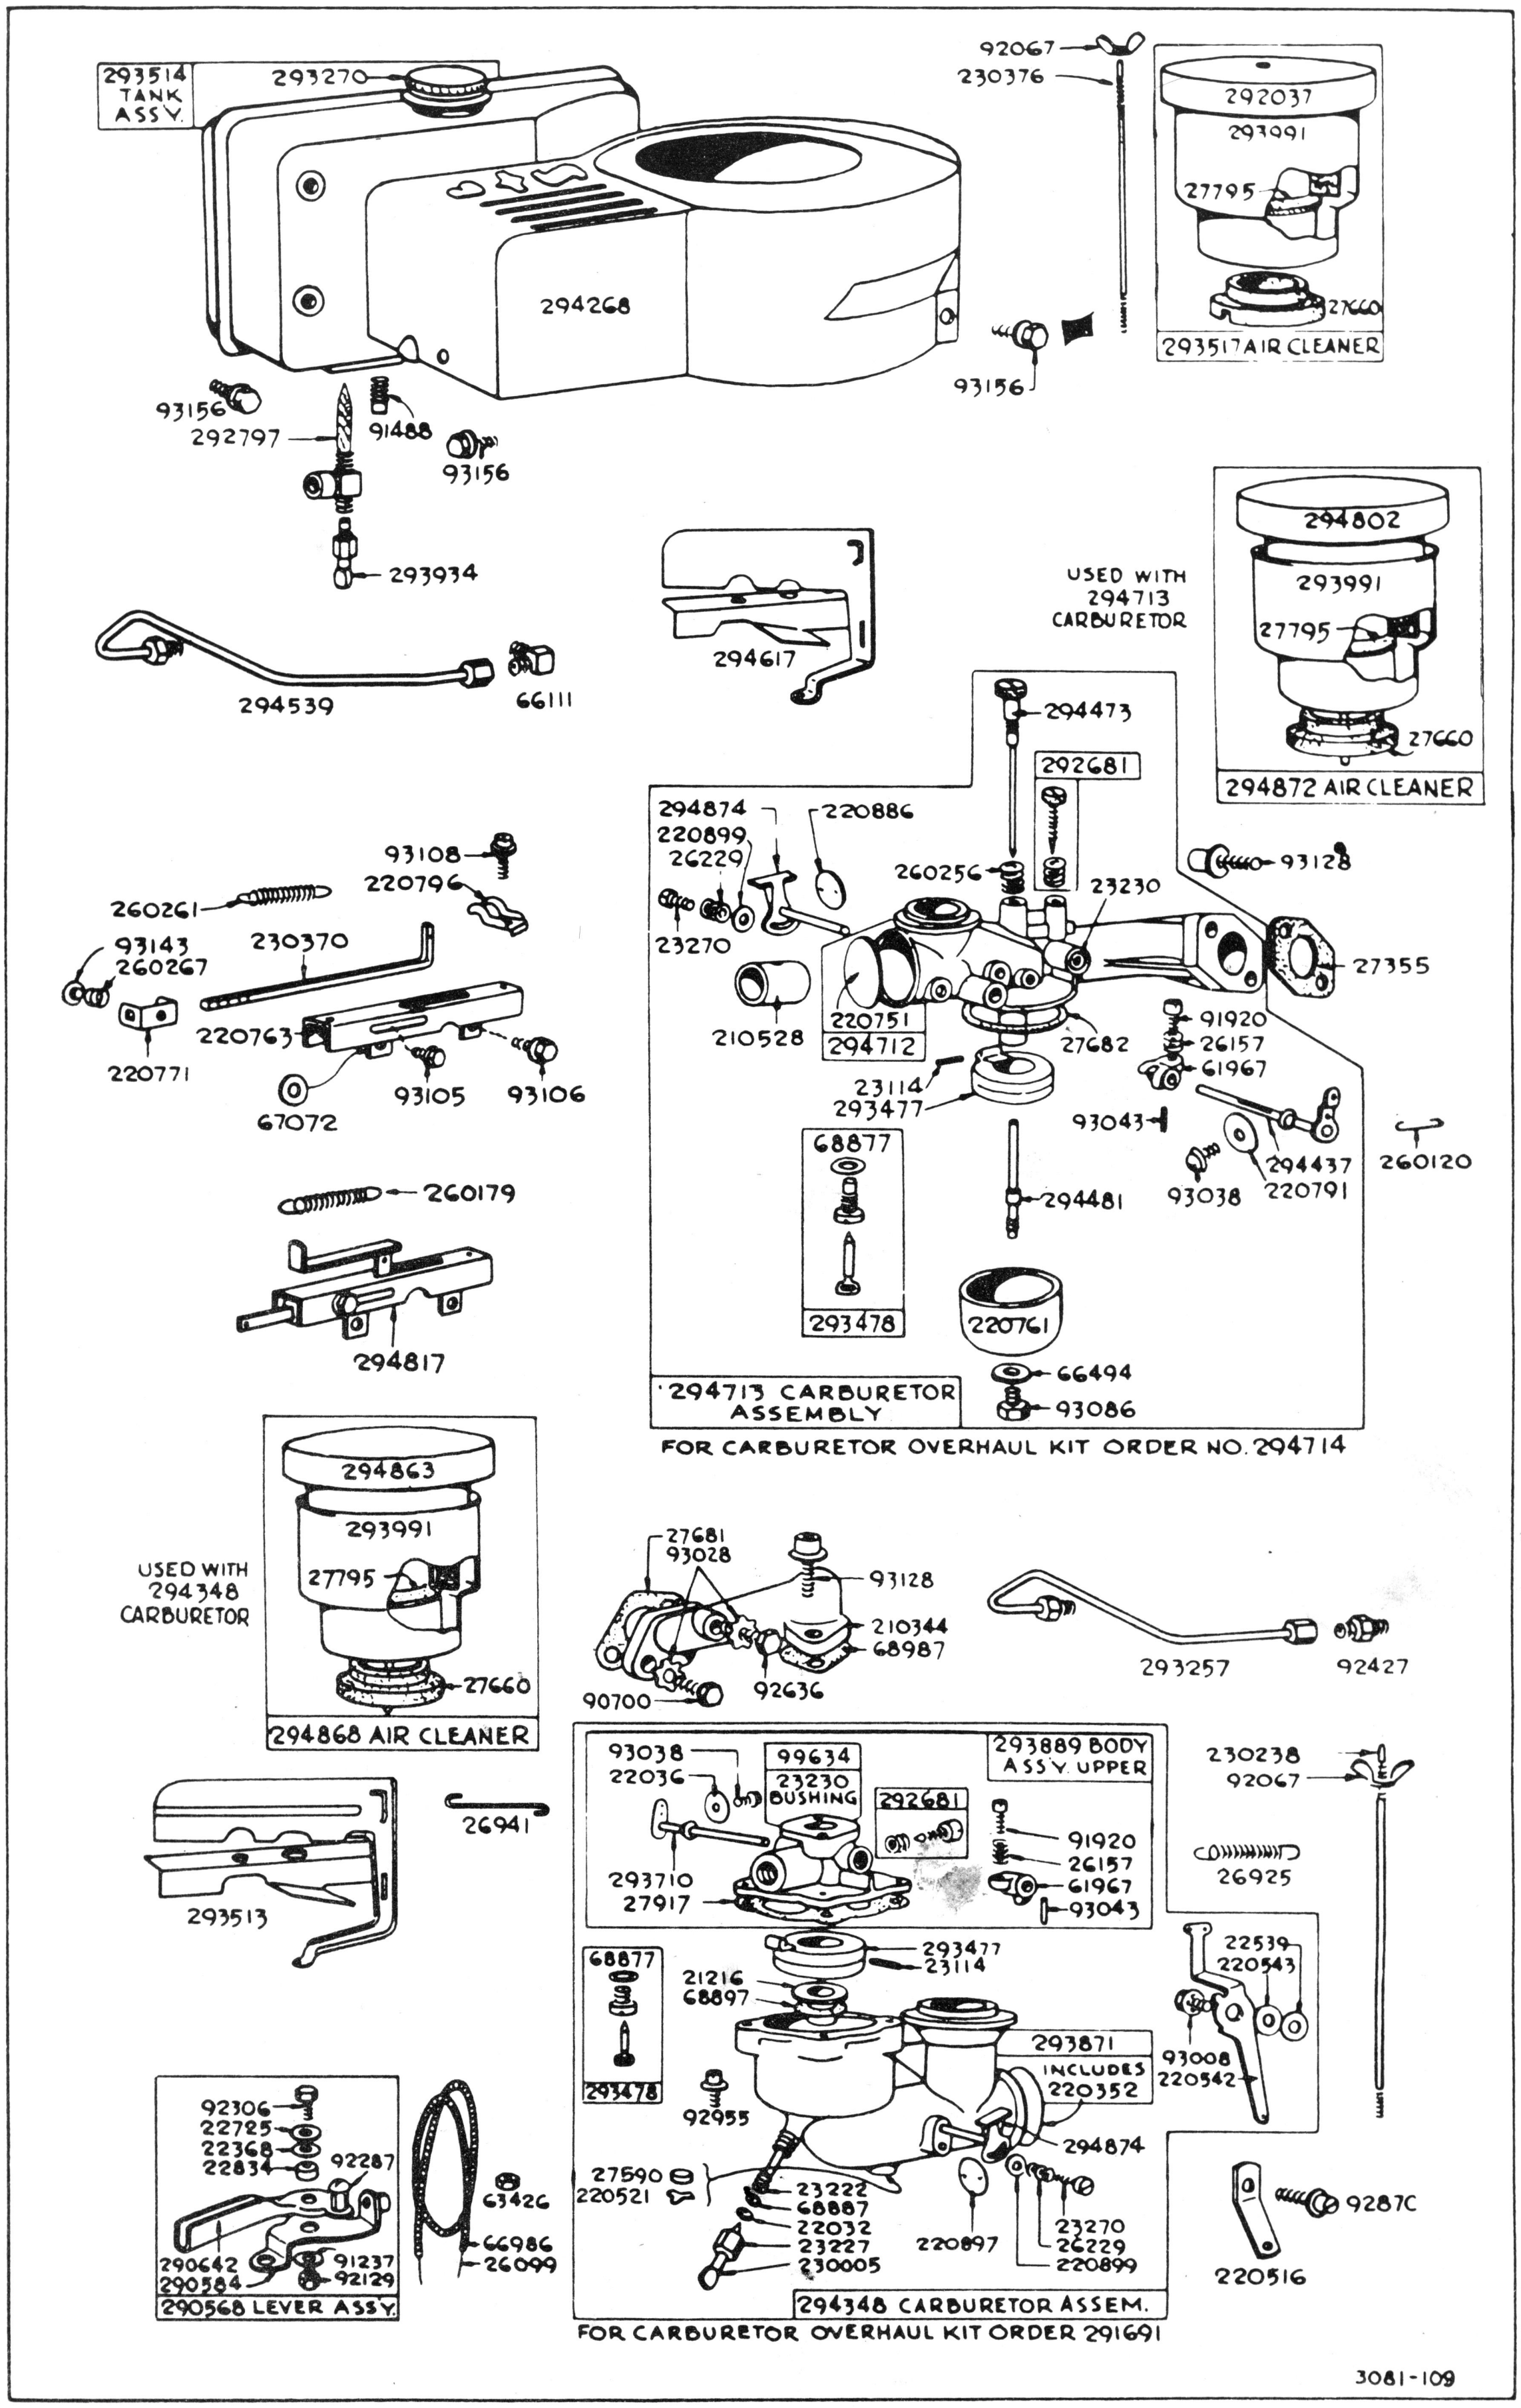


FUEL SYSTEM AND BLOWER HOUSING PARTS

Assemblies include all parts shown in frames.

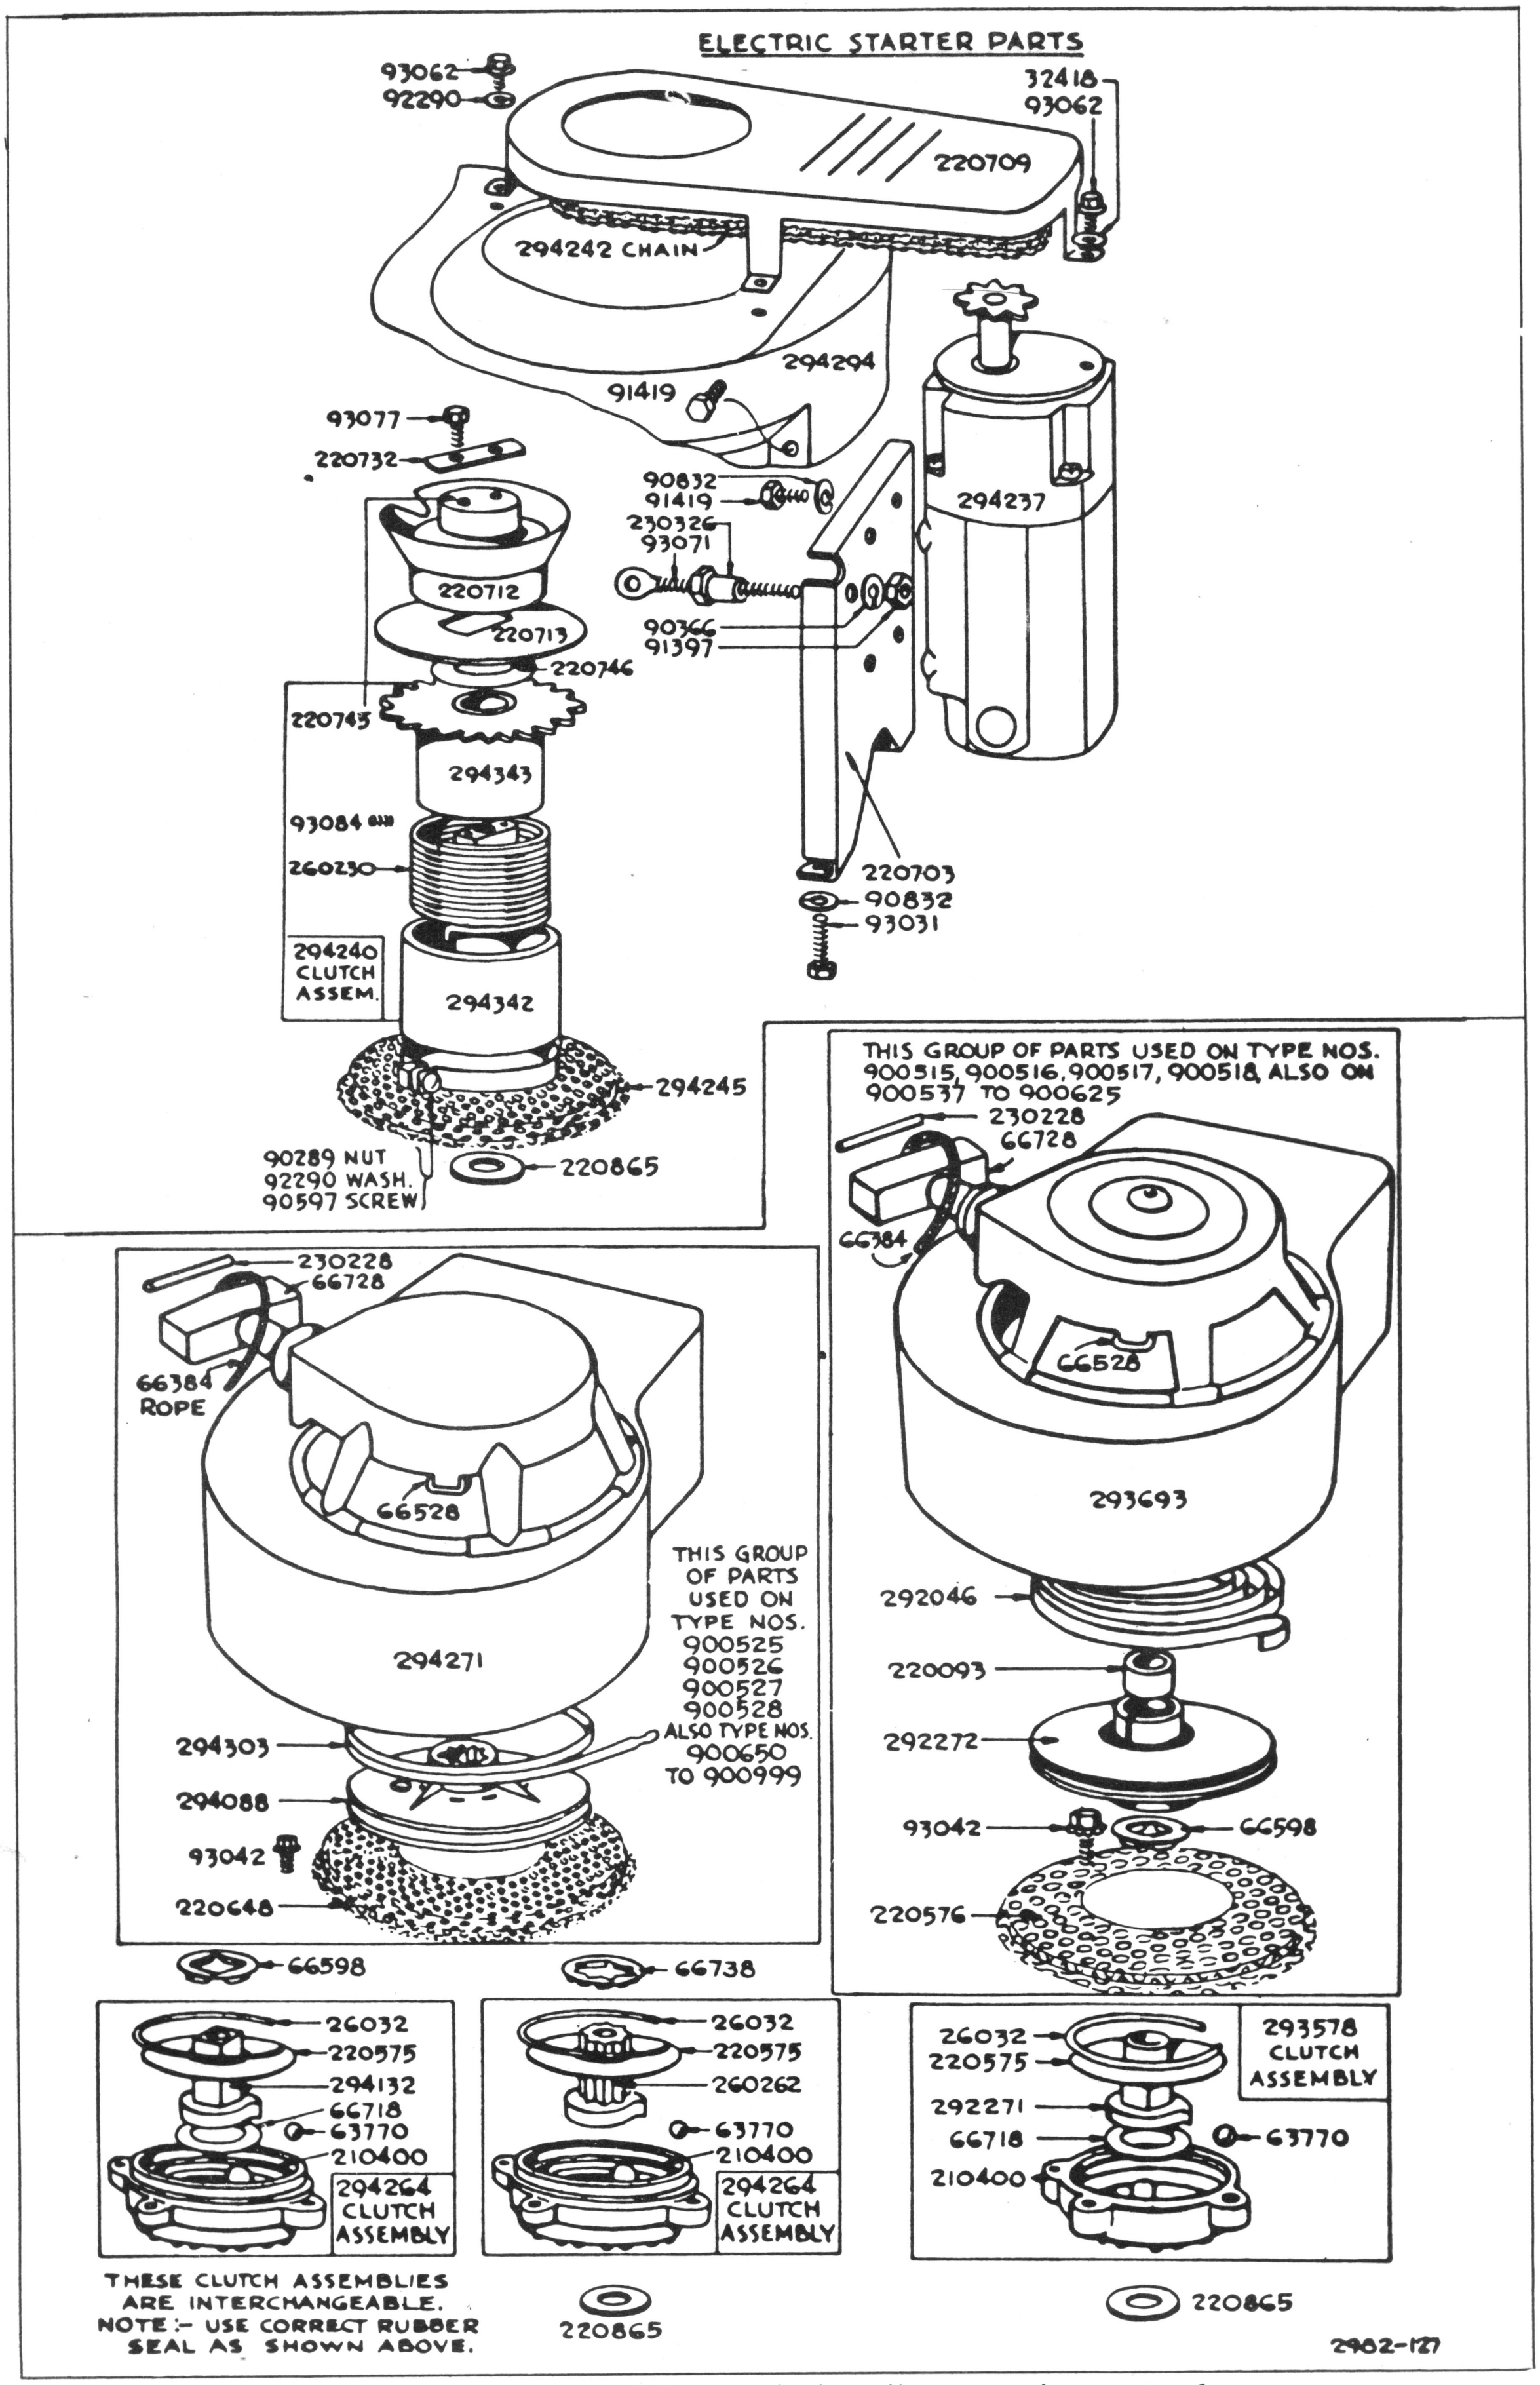

STARTER PARTS — Assemblies include all parts shown in frames.

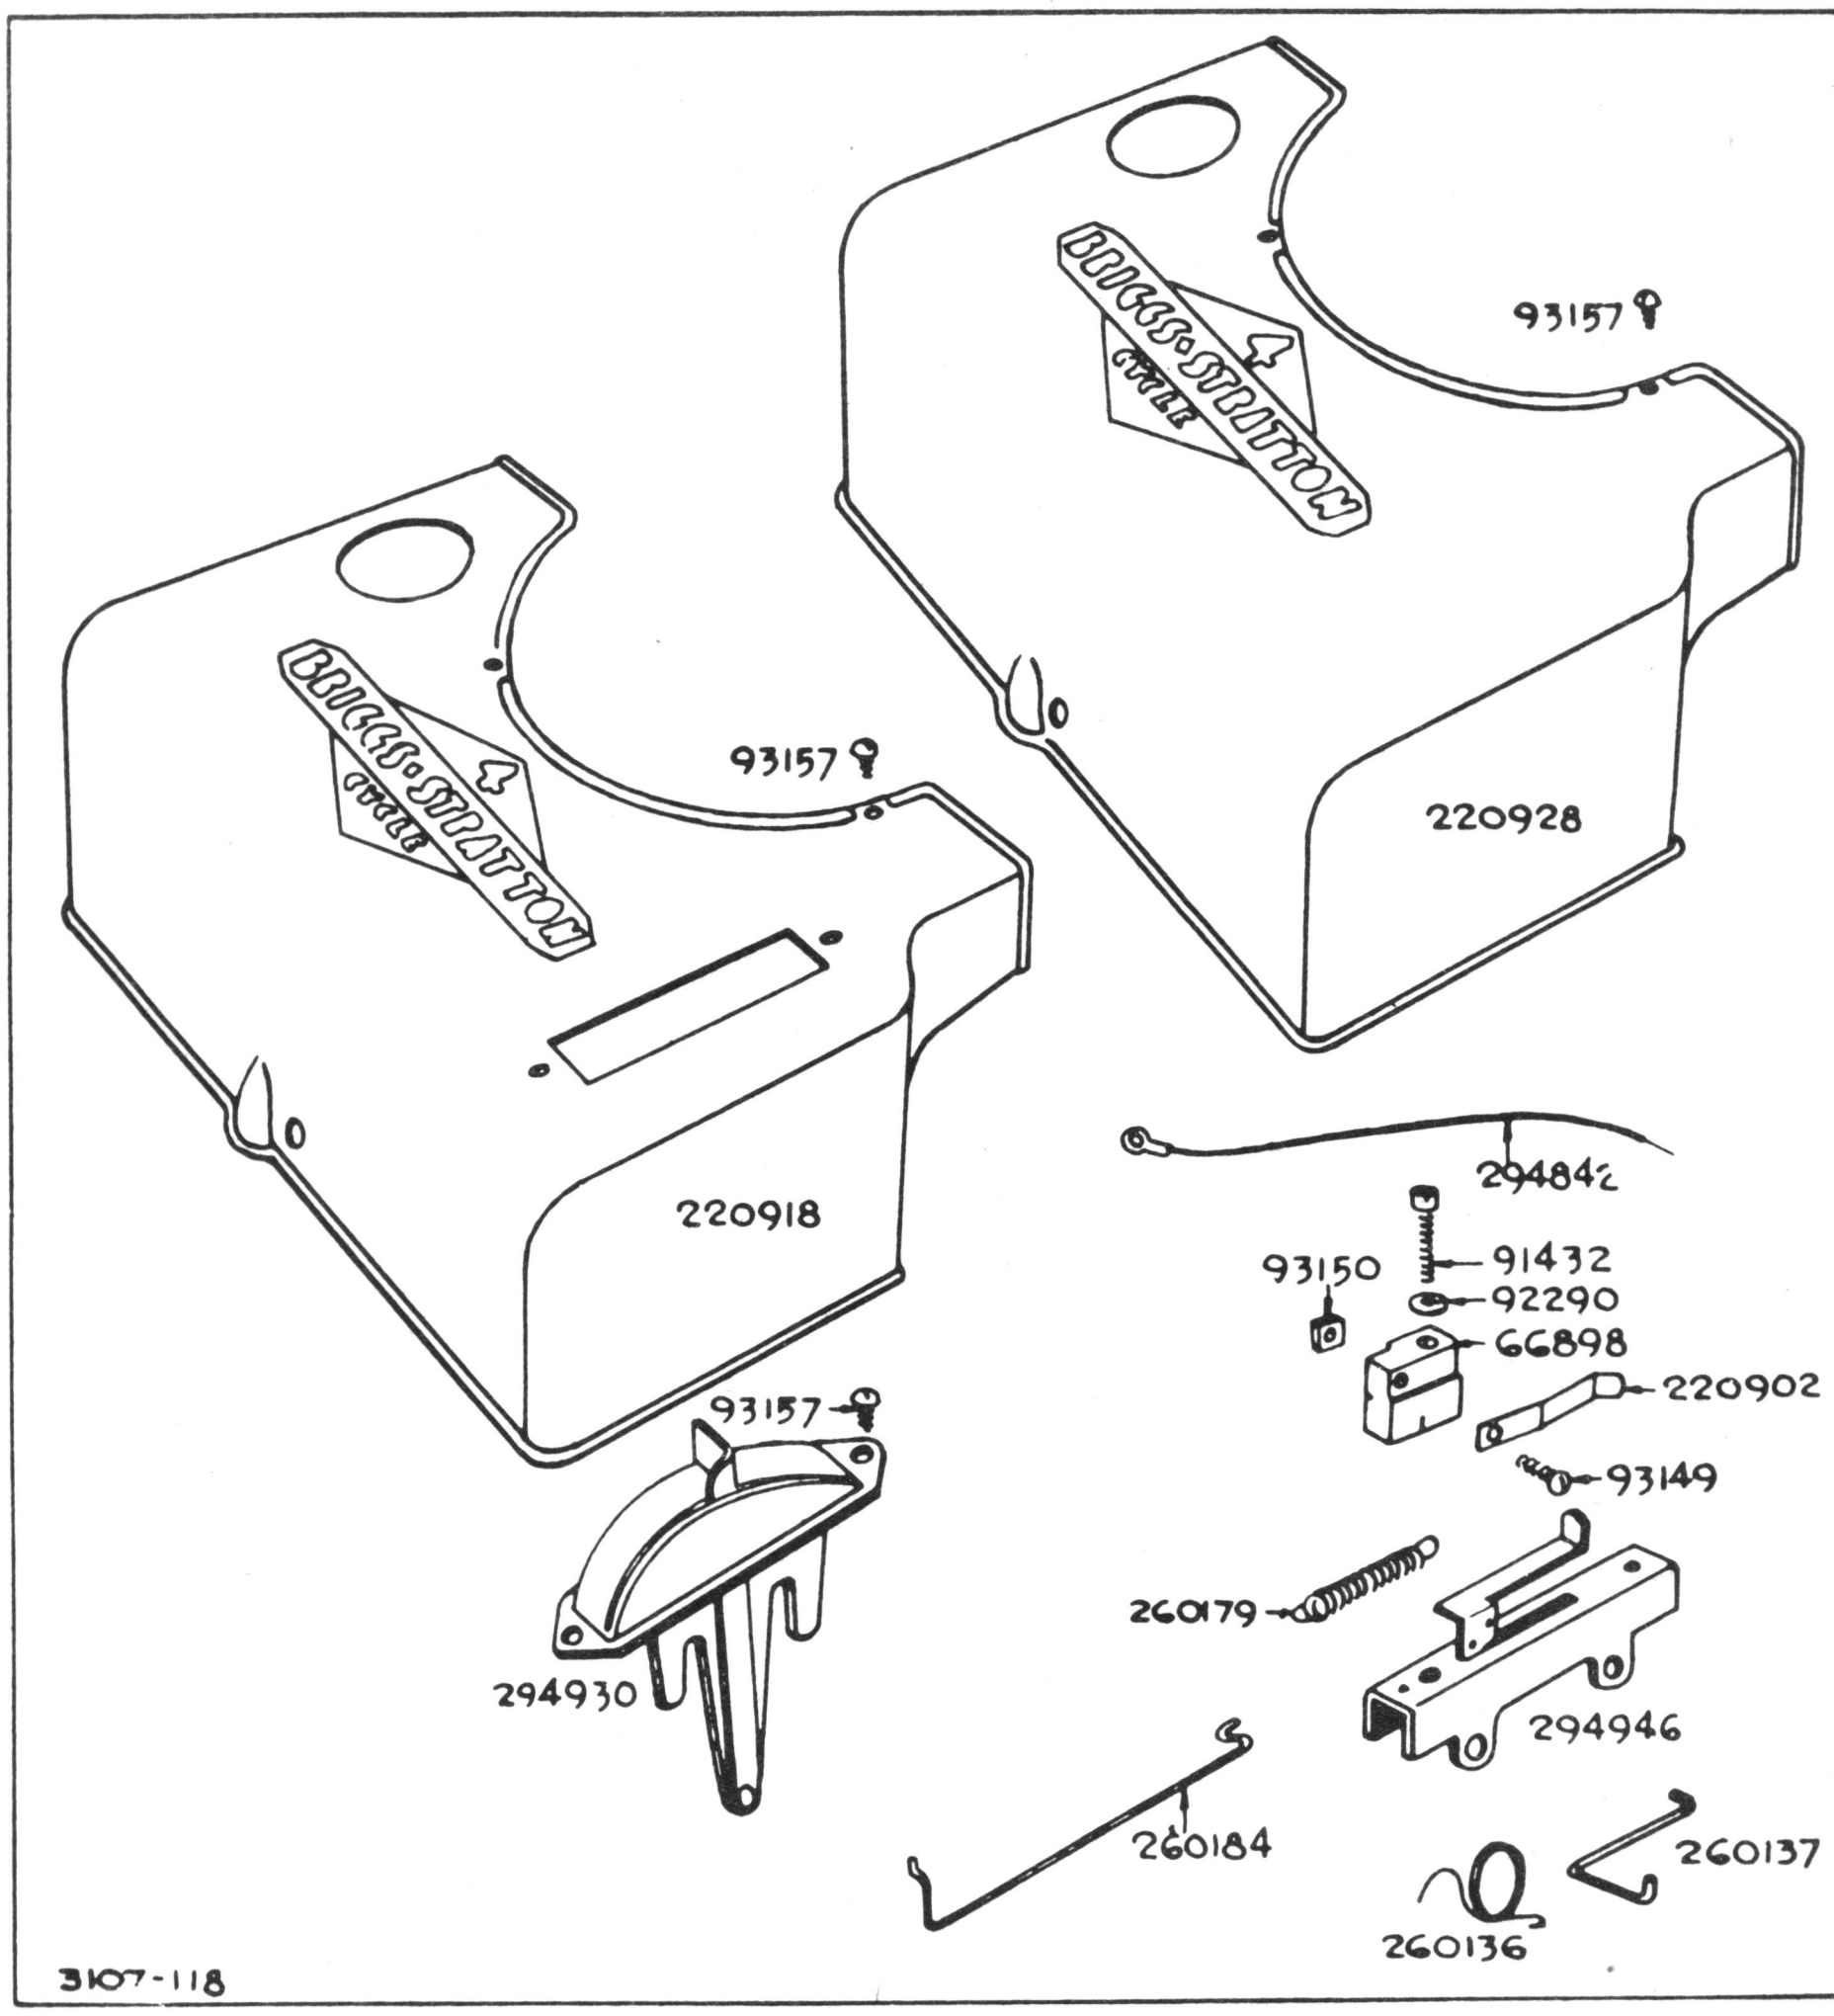

CROWN AND CONTROL PARTS

Assemblies include all parts shown in frames.

PART NO.	DESCRIPTION
19069	Puller–Flywheel (Optional Accessory)
21216	Venturi–Carburetor
†22032	Washer–Needle Valve Packing
22036	Valve–Throttle
22368	Washer–Control Lever
22539	Washer–Governor Control Lever
22725	Washer–Control Lever
22834	Washer–Spacer
22963	Washer–Cylinder Head
‡†23114	Pin–Float Hinge
23184	Retainer–Valve Spring
23187	Pin–Valve Spring Retainer
†23222	Nozzle–Carburetor
†23227	Nut–Needle Valve Packing
23230	Bushing–Throttle Shaft
23270	Screw–Choke Lever
23386	Valve–Intake
26018	Spring–Breaker Arm
26021	Spring–Intake Valve
26026	Lock–Piston Pin
26032	Spring–Clutch Retainer
26099	Wire–Control, 54″ long
Note:	If longer wire is needed, specify length by inches; if shorter wire is needed, order No. 26099 and cut to required length.
†26157	Spring–Throttle Adjustment
26229	Spring–Choke Lever
26478	Spring–Exhaust Valve
26925	Spring–Governor (Use only with Carburetor No. 294348).
26941	Link–Governor (Use only with Carburetor No. 294348).
26943	Crankshaft
Note:	**26976** Crankshaft Used on type Nos. 900511, 900535, 900542, 900547, 900549, 900556, 900564, 900578, 900579, 900607, 900611, 900811, 900904.
	26977 Crankshaft Used on type Nos. 900512, 900533, 900540, 900543, 900624, 900626, 900812, 900834.
	26978 Crankshaft Used on type Nos. 900513, 900545, 900563, 900598, 900602, 900618, 900813, 900907, 900947, 907058.
	26980 Crankshaft Used on type Nos. 900515, 900520, 900525, 900537, 900541, 900560, 900561, 900572, 900576, 900580, 900584, 900588, 900591, 900592, 900604, 900612, 900614, 900620, 900621, 900623, 900650, 900651, 900656, 900657, 900662, 900664, 900666, 900669, 900671, 900673, 900674, 900681, 900684, 900686, 900690, 900692, 900694, 900695, 900700, 900701, 900702, 900704, 900705, 900706, 900707, 900709, 900711, 900714, 900717, 900719, 900720, 900722, 900723, 900724, 900725, 900726, 900729, 900734, 900735, 900741, 900742, 900745, 900746, 900751, 900752, 900815, 900820, 900836, 900837, 900840, 900842, 900845, 900847, 900850, 900851, 900852, 900853, 900854, 900858, 900861, 900862, 900866, 900867, 900871, 900872, 900873, 900875, 900876, 900877, 900880, 900882, 900884, 900886, 900888, 900897, 900900, 900903, 900911, 900912, 900914, 900915, 900916, 900917, 900918, 900921, 900926, 900927, 900928, 900931, 900935, 900936, 900938, 900943, 900946, 900949, 900950, 900951, 900953, 900954, 900955, 900956, 900957, 900959, 900960, 900961, 900963, 900964, 900966, 900968, 900969, 900971, 900974, 900975, 900976, 900977, 900980, 900982, 900983, 900984, 900987, 900990, 900992, 900993, 900995, 900999, 907020, 907021, 907022, 907023, 907025, 907026, 907027, 907028, 907035, 907036, 907038, 907040, 907042, 907043, 907044,

† Included in Carburetor Overhaul Kit – Part No. 291691.

‡ Included in Carburetor Overhaul Kit Part No. 294714.

PART NO.	DESCRIPTION
	907045, 907048, 907051, 907053, 907059, 907062, 907063.
	26988 Crankshaft Used on type No. 900552.
	26989 Crankshaft Used on type Nos. 900551, 900597, 900654, 900678.
	26997 Crankshaft Used on type Nos. 900559, 900574, 900583.
	26998 Crankshaft Used on type Nos. 900568, 900573, 900586, 900596, 900660, 900663, 900670, 900677.
	26999 Crankshaft Used on type Nos. 900555, 900899.
	260003 Crankshaft Used on type Nos. 900517, 900522, 900527, 900715, 900817, 900822, 900855, 900894, 900934, 900948.
	260004 Crankshaft Used on type Nos. 900546, 900606, 900652, 900682, 900733, 900737, 900749, 900750, 900860, 900863, 900869, 900870, 900883, 900940, 900941, 900945, 907024.
	260005 Crankshaft Used on type Nos. 900516, 900521, 900526, 900548, 900554, 900565, 900577, 900582, 900589, 900593, 900595, 900603, 900613, 900615, 900616, 900619, 900653, 900655, 900658, 900665, 900668, 900672, 900675, 900676, 900680, 900685, 900687, 900688, 900691, 900696, 900708, 900721, 900727, 900732, 900738, 900740, 900744, 900816, 900821, 900838, 900839, 900844, 900859, 900865, 900874, 900878, 900885, 900896, 900906, 900910, 900920, 900923, 900925, 900939, 900944, 900962, 900972, 900985, 900988, 900998, 907029, 907030, 907031, 907032, 907033, 907034, 907037, 907041, 907047, 907049, 907052, 907054, 907057.
	260006 Crankshaft Used on type Nos. 900518, 900523, 900528, 900566, 900569, 900693, 900698, 900712, 900713, 900728, 900731, 900736, 900739, 900747, 900748, 900818, 900823, 900846, 900848, 900857, 900864, 900892, 900893, 900919, 900922, 900929, 900942, 900967, 900973, 900991, 907046, 907050.
	260023 Crankshaft Used on type Nos. 900570, 900661, 900697, 900913, 900930.
	260047 Crankshaft Used on type Nos. 900581, 900667, 900924.
	260072 Crankshaft Used on type No. 900609.
	260073 Crankshaft Used on type Nos. 900608, 900617, 900683, 900689, 900743, 900841, 900843, 900887, 900932, 900937, 907039.
	260085 Crankshaft Used on type Nos. 900933, 900996.
	260130 Crankshaft Used on type No. 900881.
	260157 Crankshaft Used on type Nos. 900902, 900979, 900997.
	260203 Crankshaft Used on type No. 900965.
	260215 Crankshaft Used on type Nos. 900970, 900986.
	260217 Crankshaft Used on type No. 900978.
	260232 Crankshaft Used on type Nos. 900699, 900703, 900849, 900868, 900905, 900989.
	260246 Crankshaft Used on type Nos. 900710, 900716, 900856, 900891, 900901, 900958, 907060.
	260251 Crankshaft Used on type Nos. 900718, 900879, 900889, 900952, 900994.
	260274 Crankshaft Used on type Nos. 900679, 907055, 907056.
26973	Valve–Exhaust
***27355**	Gasket–Intake Elbow Mtg.
***27548**	Gasket–Cylinder Head
***27549**	Gasket–Valve Cover
***27586**	Gasket–Crankcase–.015" thick (Standard)
27590	Filter–Carburetor Drain
***27617**	Gasket–Crankcase–.005" thick
***27618**	Gasket–Crankcase–.009" thick
***27660**	Gasket–Air Cleaner Mounting
‡27681	Gasket–Intake Elbow
‡27682	Gasket–Float Bowl
27795	Gasket–Air Cleaner
Note:	**27402** Gasket–Air Cleaner (Cup Shape) Used on air cleaner without attached stud.
†27917	Gasket–Carburetor Body
29693	Plug–Spark (with Gasket)
29806	Gasket–Spark Plug
29878	Rope–Starter
Note:	**69932** Rope–Starter Used on type Nos. 900532, 900550.
32418	Washer–Chain Guard Mtg.
61760	Key–Flywheel
61967	Stop–Throttle Lever
62577	Washer–Flywheel
63217	Nut–Needle Valve Packing (Used before Serial No. 402605).
63426	Locknut–Control Wire Casing
63770	Ball–Clutch
65704	Plunger–Breaker Point
66111	Connector–Fuel Pipe
66384	Rope–Starter
Note:	If longer rope is needed, order No. 66514 and cut to required length.
66488	Slinger–Oil
‡66494	Washer–Float Bowl Mounting
66528	Bumper–Starter Pulley
66578	Grommet–Breather Cover
66598	Washer–Ratchet Sealing (Used after Serial No. 231355) With Square Shaft Ratchet
66698	Tube–Breather
66718	Washer–Starter Clutch, Thrust
66728	Grip–Starter Rope
66738	Washer–Ratchet Sealing (Used with 7-Tooth Shaft Ratchet).
66768	Plug–Oil Filler
66898	Block–Switch
66986	Casing–Control Wire–48" long
Note:	If a longer casing is needed, specify length in inches; if a shorter casing is needed order No. 66986 and cut to required length.
67072	Washer–Spacer (Used on type Nos. 900872, 900873).
68877	Gasket–Fuel Inlet Valve Seat
†68887	Packing–Needle Valve (Used on tank valve before Serial No. 402605).
68897	Gasket–Carburetor Venturi
***†68987**	Gasket–Carburetor Mounting
89660	Seal–Oil
89838	Wrench–Spark Plug
89966	Muffler
Note:	**292054** Muffler–Exhaust Used on type Nos. 900531, 900536, 900540, 900547, 900551, 900559, 900563, 900566, 900568, 900571, 900572, 900574, 900618, 900624, 900654, 900659, 900660, 900696, 900710, 900715, 900716, 900738, 900855, 900856, 900920. **294441** Muffler–Exhaust Used on type Nos. 900607, 900623, 900628, 900662, 900680, 900681, 900682, 900684, 900689, 900691, 900693, 900694, 900695, 900698, 900704, 900706, 900708, 900714, 900720, 900721, 900728, 900729, 900733, 900734, 900739, 900740, 900741, 900744, 900749, 900750, 900840, 900842, 900843, 900844, 900846, 900847, 900848, 900853, 900857, 900858, 900860, 900861, 900864, 900865, 900866, 900867, 900869, 900870, 900874, 900876, 900877, 900883, 900884, 900885, 900890, 900894, 900895, 900899, 900905, 900908, 900910, 900916, 900919, 900923, 900925, 900926, 900929, 900931, 900932, 900935, 900939, 900940, 900941, 900944, 900945, 900948, 900950, 900951, 900952, 900953, 900959, 900964, 900966, 900968, 900969, 900972, 900973, 900975, 900984, 900985, 900986, 900988, 900991, 900992, 900995, 907021, 907024, 907030, 907031, 907032, 907037, 907042, 907043, 907044, 907046, 907052, 907057, 907060.
90029	Screw–Machine, Rd. Hd.–4-36 x 1/4"
90289	Nut–Square–10-32
90366	Washer–Lock–5/16 x 1/8 x 1/16"
90369	Washer–Lock–No. 4 x 3/64 x 1/32"
90597	Screw–Machine, Rd.–10-32 x 1/2"
90700	Screw–Cap, Hex. Hd.–1/4-20 x 3/4"
90832	Washer–Lock–1/4 x 3/32 x 5/64"
91084	Plug–Oil Drain
Note:	**93027** Plug–Oil Drain (Socket Head) Used on type Nos. 900587,

† Included in Carburetor Overhaul Kit – Part No. 291691.

* Included in Gasket Set – Part No. 293525.

PART NO.	DESCRIPTION
	900588, 900604, 900615, 900617, 900671, 900687, 900689, 900843, 900855, 900894, 900906, 900917, 900932, 900947, 900949, 900961, 907057.
91237	Washer–Lock– 1/4 x 3/32 x 5/64"
91386	Screw–Cylinder Head (2" long)
91397	Nut–Hex. –5/16-18
91419	Screw–Cap, Hex. Hd. – 1/4-20 x 5/8"
91432	Screw–Machine, Fill. Hd. – 10-32 x 7/8"
91488	Plug–Pipe, 1/8" Standard, Sq. Hd.
91708	Nut–Flywheel
91810	Elbow–Exhaust (45° Street)
Note:	**91812** Elbow–Exhaust (90° Street) Used on type Nos. 900554, 900562, 900565, 900591, 900594, 900619, 900655, 900658, 900673, 900717, 900734, 900832, 900853, 900861, 907057.
91811	Locknut–Exhaust Elbow
91920	Screw–Machine, Fill. Hd. – 8-32 x 5/8"
92067	Nut–Wing
92129	Nut–Hex. –1/4-28
92287	Screw–Machine, Rd. Hd. – 10-32 x 1/4"
92290	Washer–Lock– No. 10 x 1/16 x 3/64"
92296	Screw–Connecting Rod
92306	Screw–Cap, Hex. Hd. – 1/4-28 x 5/8"
92427	Connector–Tubing
92636	Screw–Cap, Hex. Hd. – 1/4-20 x 2"
92674	Screw–Cylinder Head (2-3/8" long)
92747	Screw–Oil Slinger Bracket Mounting Sem
92813	Washer–Lock–Shakeproof
92870	Screw–Throttle Clip and Breather Mounting Sem
92955	Screw–Throttle Housing Mounting Sem
92980	Screw–Blower Housing Mtg. (Use Part No. 93158).
92984	Screw–Armature Mounting Sem
92987	Nut–Condenser Terminal
93008	Screw–Governor Control Lever Mounting Sem
93014	Screw–Dust Cover Mtg. Sem
93028	Washer–Lock–Shakeproof
93031	Screw–Cap, Hex. Hd. – 1/4-20 x 1-1/2"
93032	Screw–Sump Mounting Sem
93038	Screw–Throttle Valve Mounting Sem
93042	Screw–Rotating Screen, Condenser Clamp and Cylinder Shield Mtg. Sem
93043	Pin–Throttle Stop
93062	Screw–Guard Mounting
93065	Key–Woodruff No. 505
93071	Stud–Starter Adjusting
93077	Screw–Clamp Mounting
93084	Screw–Set, Socket Hd., Cup Point–10-32 x 1/4"
93086	Screw–Carburetor Bowl Mtg.
93105	Screw–Control Rod Guide Bracket Mounting Sem
93106	Screw–Speed Control Mounting Sem
93108	Screw–Clamp Mounting Sem
93117	Screw–Contact Finger Post and Coil Lead Mounting
93128	Screw–Carburetor Mtg. Sem
93143	Eyelet–Control Rod Spring
93149	Screw–Machine, Rd. Hd. – 5-40 x 3/8"

‡ Included in Carburetor Overhaul Kit – Part No. 294714.

PART NO.	DESCRIPTION
93150	Nut–Square, 5-40
93157	Screw–Sector and Crown Mtg.
93158	Screw–Fuel Tank and Blower Housing Mounting Sem
99634	Body–Upper Carburetor
210209	Head–Cylinder
210222	Ring–Piston, Comp., Top–Standard
210223	Ring–Piston, Comp., Center–Standard
210224	Ring–Piston, Oil Standard
210320	Bracket–Oil Slinger
210344	Elbow–Intake
210361	Ring–Piston, Comp., Top–.010" O.S.
210362	Ring–Comp., Top–.010" O.S.
210363	Ring–Piston, Oil–.010" O.S.
210364	Ring–Piston, Comp., Top–.020" O.S.
210365	Ring–Piston, Comp., Center–.020" O.S.
210366	Ring–Piston, Oil–.020" O.S.
210367	Ring–Piston, Comp., Top–.030" O.S.
210368	Ring–Piston, Comp., Center–.030" O.S.
210369	Ring–Piston, Oil–.030" O.S.
210400	Housing–Starter Clutch
210453	Gear–Cam
210528	Venturi–Carburetor
220093	Retainer–Spring
220352	Plug–Welch
220366	Cover–Breaker Point and Condenser
220460	Lock–Connecting Rod Screw
220477	Clamp–Condenser
220478	Shield–Cylinder
220516	Clip–Throttle Spring
220521	Retainer–Carb. Drain Filter
220542	Lever–Governor Control
220543	Washer–Governor Control Lever Mtg. (Spring Type)
220575	Washer–Clutch Retainer
220576	Screen–Rewind Starter
220581	Cover–Cylinder Head
Note:	**220354** Cover–Cylinder Head (with stop switch) Used on engines before Serial No. 76400.
220648	Screen–Rewind Starter
220675	Shield–Ignition Coil
220703	Bracket–Starter Support
220709	Guard–Electric Starter Chain
220712	Pulley–Rope Starter
220713	Washer–Pinion Guard
220732	Lock–Starter Pulley Screw
220745	Clamp–Starter Clutch
220746	Washer–Thrust
‡220751	Plug–Welch
220761	Bowl–Float
220763	Housing–Speed Control
220771	Bracket–Control Rod
220791	Valve–Throttle
220796	Clamp–Remote Control Casing
220859	Locknut–Muffler and Exhaust Elbow
220865	Washer–Spring (Used to lock starter clutch).
220867	Spacer–Cam Gear
Note:	Use only when replacing Nos. 293512 and 293597 Sumps on engines with No. 210320 Bracket.
220884	Switch–Stop
220886	Valve–Choke
Note:	**220773** Valve–Choke (with hole) Uses: **93038** Screw (for mounting)
220897	Valve–Choke

PART NO.	DESCRIPTION
Note:	**22050** Valve–Choke (with hole) Uses: **93038** Screw– (for mounting)
220899	Washer–Choke Lever
220902	Blade–Switch
220918	Crown–Blower Housing
220928	Crown–Blower Housing
230005	Valve–Needle
230173	Tappet–Valve
230228	Pin–Starter Grip
230238	Stud–Air Cleaner (Used only with Carburetor No. 294348).
230275	Bushing–Oil Slinger
230326	Nut–Starter Adjusting
230370	Rod–Control
230376	Stud–Air Cleaner (Used only with Carburetor Nos. 294713 and 294716).
260120	Link–Governor (Used only with Carburetor Nos. 294713 and 294716).
260136	Spring–Choke Return (Choke A-Matic)
260137	Link–Choke Return (Choke-A-Matic)
260179	Spring–Governor (Used only with stamped control rod).
260184	Link–Speed Control
260230	Spring–Clutch
260255	Spring–Breather Tube
260256	Spring–Needle Valve
260261	Spring–Governor (Used only with Square Control Rod No. 230370).
260262	Ratchet–Rewind Starter (7-Tooth Shaft)
290568	Lever Assembly–Control
290584	Base–Control Lever
290642	Lever–Control
291617	Armature–Magneto
291630	Shield–Spark Plug (with stop switch)
291691	Carburetor Overhaul Kit
291841	Seal–Oil
291925	Pin Assy.–Piston Standard
291926	Pin Assembly–Piston .005" O.S.
292037	Cover and Filter Air Cleaner
292046	Spring–Starter
292149	Cable–Ignition
Note:	**294577** Cable–Ignition Used on type Nos. 900687, 900906, 907057.
292271	Ratchet–Rewind Starter
292272	Pulley–Rewind Starter
‡292681	Valve Assembly–Carb. Idle
292797	Outlet–Fuel Tank (includes strainer)
292833	Breather–Valve Chamber
293205	Flywheel–Magneto
Note:	**29835** Flywheel–Magneto Used on type Nos. 900545, 900549, 900551, 900552, 900553, 900556, 900557, 900563, 900566, 900579, 900582, 900589, 900592, 900597, 900613, 900615, 900618, 900624, 900626, 900654, 900659, 900668, 900672, 900674, 900678, 900685, 900687, 900693, 900700, 900702, 900715, 900728, 900834, 900846, 900850, 900855, 900857, 900894, 900900, 900906, 900907, 900954, 900955, 900991, 907057, 907058, 907063.
293257	Pipe–Fuel 12-7/16" long (Used only with Carburetor No. 294348).
293270	Cap–Fuel Tank
293400	Piston Assembly–Standard

PART NO.	DESCRIPTION
293401	Piston Assembly .010" O.S.
293402	Piston Assembly—.020" O.S.
293403	Piston Assembly—.030" O.S.
293477	Float—Carburetor
‡†293478	Valve and Seat—Fuel Inlet
293505	Rod Assembly—Connecting
293506	Ring Set—Standard Piston
293507	Ring Set .010" O.S. Piston
293508	Ring Set—.020" O.S. Piston
293509	Ring Set .030" O.S. Piston
293511	Cylinder
293512	Sump—Oil
Note:	**293597** Sump-Oil Used on type Nos. 900530, 900533, 900543, 900549, 900582, 900589, 900615, 900668, 900672, 900687, 900906, 900947, 900978, 907057.
293513	Blade—Governor (Used only with Carburetor No. 294348).
293514	Tank Assembly—Fuel
293517	Cleaner Assembly—Air (Used with Stud Nos. 230238 and 230376).
293525	Gasket Set
293578	Clutch Assembly—Starter
293693	Housing—Blower
Note:	**293963** Housing—Blower Used on type Nos. 900581, 900586, 900603, 900604, 900606, 900617, 900621.
293708	Bushing—Cylinder
Note:	Requires special tools for installation.
293709	Bushing—Oil Sump
Note:	Requires special tools for installation.
293710	Shaft and Lever Assembly—Throttle
293869	Tube—Breather
293871	Body—Lower Carburetor (with breather tube)
Note:	**293515** Body Lower Carb. (without breather tube) Used on earlier model engines.
293889	Body Assy.—Upper Carburetor
293934	Valve Assy.—Fuel Shut-off
293959	Starter Pulley with Screen (Used on engines after Serial No. 872200).
Note:	**293432** Starter Pulley with Screen Used on engines before Serial No. 872201.
293991	Bowl—Air Cleaner
294064	Ring Set .040" O.S. Piston
294065	Piston Assembly—.040" O.S.
294088	Pulley—Rewind Starter
294132	Ratchet—Rewind Starter (with Square Shaft) Use Part No. 260262 Ratchet with No. 66738 Sealing Washer.
294237	Motor—Electric Starting
294240	Clutch—Electric Starting
294242	Chain—Electric Starter
294245	Screen—Electric Starter Rotating
294264	Clutch Assy.—Rewind Starter
294268	Housing—Blower (5" diameter intake hole)
Note:	**293492** Housing—Blower (4-1/4" diameter intake hole) Used on engines before Serial No. 872201.
294271	Housing—Blower (5" diameter intake hole)
Note:	**294277** Housing—Blower (5" diameter intake hole) Used on type Nos. 900667, 900670, 900680, 900681, 900682, 900689, 900702, 900716, 900718, 900719, 900723, 900726, 900742, 900743, 900747, 900748, 900840, 900843, 900844, 900856, 900865, 900879, 900886, 900887, 900889, 900891, 900903, 900918, 900924, 900926, 900933, 900936, 900937, 900950, 900951, 900952, 900972, 900974, 900980, 900986, 900990, 900994. **294657** Housing—Blower (5" diameter intake hole) Used on type Nos. 900745, 900746, 900872, 900873, 900931, 900932, 900958, 900960, 900963, 900966, 900971, 900975, 900976, 900987, 900992, 900995, 900996, 907021, 907026, 907028, 907036, 907056. **295061** Housing—Blower Used on type Nos. 900902, 900979, 900997. **295628** Blower Housing with Rewind Starter Housing and Fuel Tank Used on type No. 907063.
294294	Housing—Blower (Electric Starter)
294303	Spring—Starter
294342	Adapter—Shaft
294343	Sprocket—Electric Starter
294348	Carburetor Assembly (with breather tube)
Note:	**293516** Carburetor Assembly (without breather tube) Used on earlier model engines.
294437	Shaft and Lever Assembly—Throttle
‡294473	Valve—Needle
‡294481	Jet—Carburetor
294539	Pipe—Fuel (Used only with Carburetor Nos. 294713 and 294716).
294617	Blade—Governor (Used only with Carburetor Nos. 294713 and 294716).
294628	Breaker Points and Condenser Set
Note:	**293999** Wire—Condenser Ground **92791** Washer—Lock—Shakeproof (2) **90576** Nut—Hex.—8-32 **90072** Screw—Machine, Rd. Hd.—8-32 x 5/8" **66895** Insulator—Terminal Used on type Nos. 900589, 900618, 900672, 900745, 900746, 900872, 900873, 900947.
294652	Oil Slinger Gear and Bracket
294712	Body Assembly—Carburetor
Note:	**294717** Body Assembly—Carburetor Used on type Nos. 900872, 900873, 900925, 900926, 900929, 900930, 900931, 900932, 900935, 900936, 900937, 900938, 900939, 900940, 900941, 900942, 900944, 900945, 900946, 900948, 900949, 900950, 900951, 900952, 900953, 900959, 900960, 900961, 900962, 900963, 900966, 900967, 900968, 900969, 900972, 900973, 900975, 900976, 900977, 900979, 900980, 900982, 900984, 900985, 900987, 900989, 900990, 900991, 900992, 900993, 900995, 900996, 907022, 907023, 907024, 907026, 907028, 907030, 907031, 907032, 907034, 907036, 907037, 907043, 907044, 907046, 907047, 907048, 907051, 907052, 907054, 907055, 907056, 907057, 907059, 907062, 907063.
294713	Carburetor Assembly
Note:	**294716** Carburetor Assembly Used on type Nos. 900872, 900873, 900925, 900926, 900929, 900930, 900931, 900932, 900935, 900936, 900937, 900938, 900939, 900940, 900941, 900942, 900944, 900945, 900946, 900948, 900949, 900950, 900951, 900952, 900953, 900959, 900960, 900961, 900962, 900963, 900966, 900967, 900968, 900969, 900972, 900973, 900975, 900976, 900977, 900979, 900980, 900982, 900984, 900985, 900987, 900989, 900990, 900991, 900992, 900993, 900995, 900996, 907022, 907023, 907024, 907026, 907028, 907030, 907031, 907032, 907034, 907036, 907037, 907043, 907044, 907046, 907047, 907048, 907051, 907052, 907054, 907055, 907056, 907057, 907059, 907062, 907063.
294714	Carburetor Overhaul Kit
294802	Cover and Filter—Air Cleaner
294817	Control Assembly—Speed
294842	Wire—Ground
294863	Cover and Filter—Air Cleaner
294868	Cleaner Assembly—Air (with mounting stud)
294872	Cleaner Assembly—Air (with mounting stud)
294874	Shaft and Lever Assy.—Choke
Note:	**294655** Shaft and Lever Assembly—Choke Used on type Nos. 900872, 900873, 900925, 900926, 900929, 900930, 900931, 900932, 900935, 900936, 900937, 900938, 900939, 900940, 900941, 900942, 900944, 900945, 900946, 900948, 900949, 900950, 900951, 900952, 900953, 900959, 900960, 900961, 900962, 900963, 900966, 900967, 900968, 900969, 900972, 900973, 900975, 900976, 900977, 900979, 900980, 900982, 900984, 900985, 900987, 900989, 900990, 900991, 900992, 900993, 900995, 900996, 907022, 907023, 907024, 907026, 907028, 907030, 907031, 907032, 907034, 907036, 907037, 907043, 907044, 907046, 907047, 907048, 907051, 907052, 907054, 907055, 907056, 907057, 907059, 907062, 907063. Uses: **260136** Spring—Choke Return **260137** Link—Choke Return
294930	Sector Assembly—Crown
Note:	**294931** Sector Assy.—Crown Used on type Nos. 907032, 907054.
294946	Control Assembly—Speed (Used on engines with remote control) Uses: **260183** Spring—Control Rod

‡ Included in Carburetor Overhaul Kit — Part No. 294714.

† Included in Carburetor Overhaul Kit — Part No. 291691.